





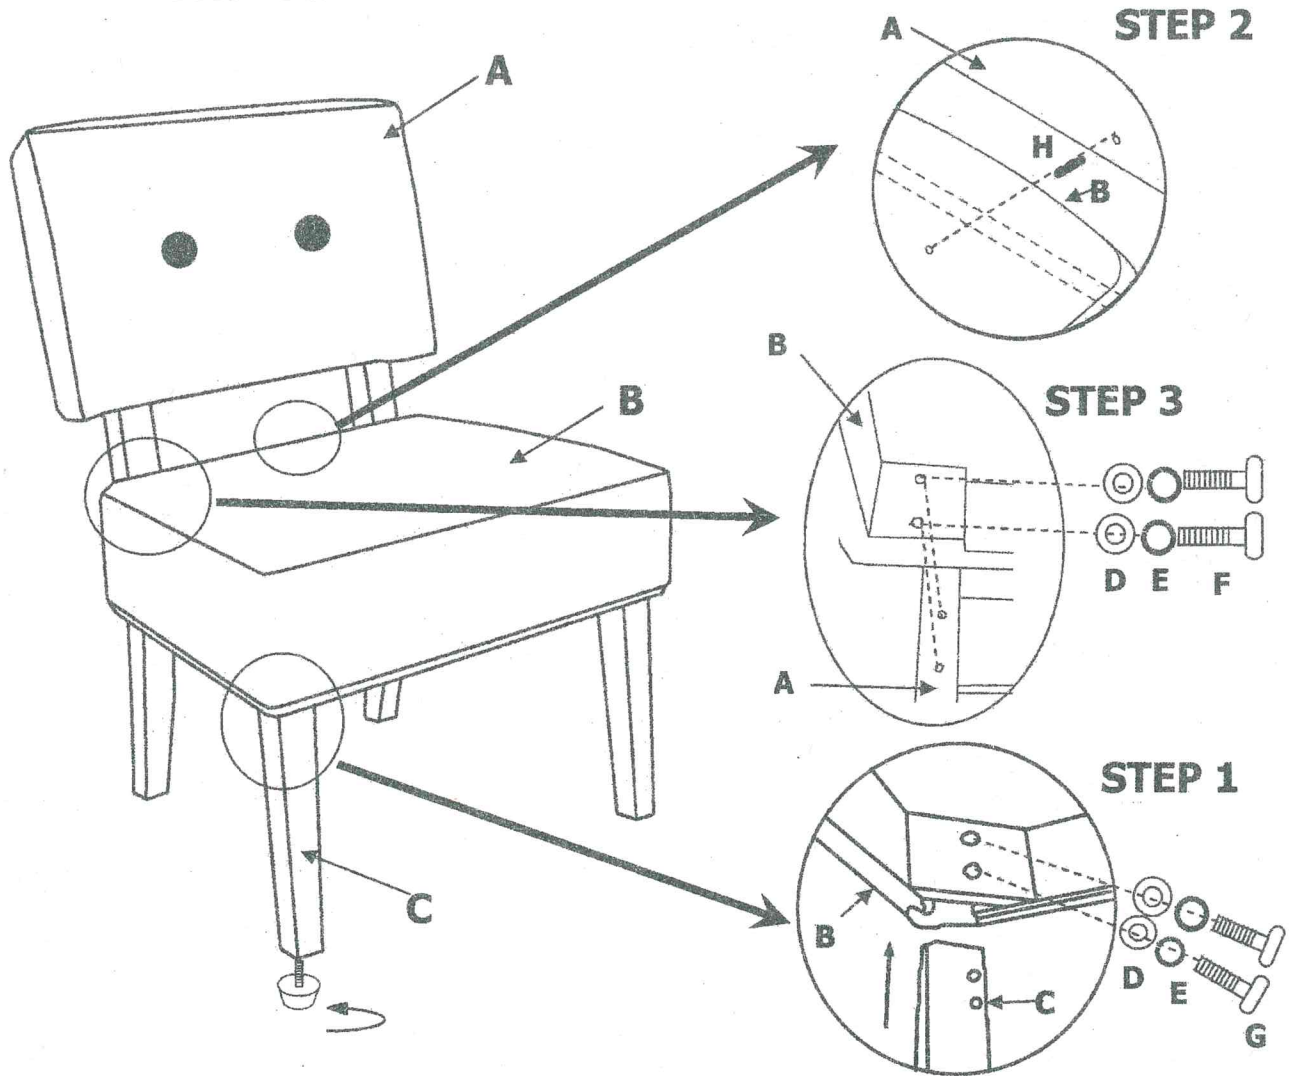





ASSEMBLY INSTRUCTION

Sabrina Accent Chair/Brown Tan Animal Print

020 40 46
K5509-F617



A		1PC	D	 φ22mm	8PCS	G	 φ5/16"x60mm	4PCS
B		1PC	E	 φ8mm	8PCS	H	 φ1 x 4cm	1PC
C		2PCS	F	 φ5/16"x70mm	4PCS	I	 5mm	1PC

ATTENTION:

WHEN YOU ASSEMBLE, PLEASE DO NOT TIGHTEN EACH SCREW UNTIL LEGS AND BACK PANEL ARE PROPERLY ALIGNED WITH SEAT FRAME. LAST, ADJUST THE PART (G) TO LET FOUR LEGS ON A LEVEL (SEE STEP 3).